

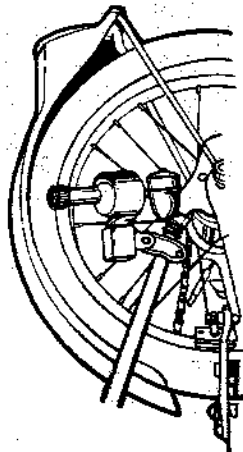
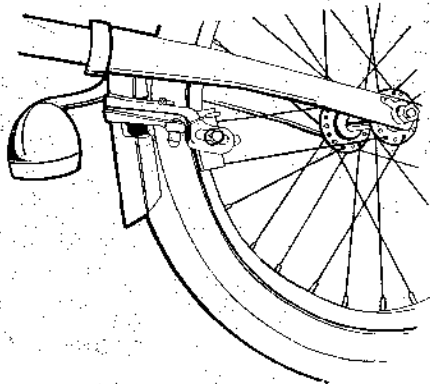
DAHON**INSTALLATION INSTRUCTIONS
FOR DYNAMO, LAMP SET**

The following instructions are in addition to the instructions furnished in the box containing the Dynamo, Lamp Set.

1. Remove the cap nut from the front brake axle shaft. Install the headlamp bracket support over the axle shaft and replace the cap nut. The bracket support can be bent to position the headlamp as desired. (See diagram)
2. The rear lamp should be installed on the left seatstay tube near the rear hub. (See diagram)
3. The Dynamo unit should be installed on the left seatstay tube just ahead and above the rear lamp location. (See diagram)
- 3a. The location of the Dynamo on the seatstay should be such that permits the rotating end of the Dynamo to turn against the approximate center of the tire sidewall when in "down" position. When in the "up" position, the rotating end of the Dynamo should not be in contact with the tire.
- 3b. The angle of the Dynamo should be fixed at a point permitting the rotating end of the Dynamo to turn smoothly on the same line of rotation as the tire.

NOTE: After installation, fold the bike to make sure that there is no interference when folded.

4. After installation of the Headlamp, Dynamo and Rear Lamp, run the wires as follows:
 - 4a. The Headlamp wire should be placed thru the bracket support then led around the steering bearing housing leaving enough slack to permit turning the handlebar without pulling the wire tight. The wire should be wrapped around the front frame upper tube at least two rotations to assure some slack remains, then continued to reach the Dynamo. NOTE: Be sure and leave enough slack at the frame hinges so the bike can be folded without pulling the wire. Remove excess wire, then attach to the Dynamo contact per the instructions included with the Dynamo.
 - 4b. The Rear lamp wire should be wrapped once around the seatstay tube to avoid possible entanglement. Remove excess wire, then attach to the Dynamo contact per the instructions included.
 5. To check operation, simply position the Dynamo in the "down" position so the rotating end is in contact with the tire, then rotate the wheel. Both lamps should be "on" while the wheel is rotating. If not, check the wiring and their attachment to the Dynamo.
- NOTE: This Dynamo, Lamp Set is a universal model and not specifically manufactured for any particular bike. Therefore, certain brackets must be reversed, or slightly altered to permit proper installation.

**6.3.17 Caster Wheel (Third Wheel)****A. Disassembly--**

Unscrew the two elbow assembly mounting bolts (U-320 and U-340), and remove the elbow assembly. Take out the pin (U-120) by first removing the spring clip retainer (U-130) and tapping it out. To remove the caster wheel (U-210), loosen the 4 screws (U-220) which mount it to the caster wheel bracket (U-110).